



Yamarin 80 Day Cruiser

OWNER'S MANUAL

FOREWORD

Congratulations on choosing a Yamarin 80 Day Cruiser! We are delighted to welcome you as a Yamarin owner.

The intention of this manual is to help you to operate your craft safely, with maximum enjoyment. The manual contains details of the craft, the equipment supplied or fitted, its systems and information on its operation, care and maintenance. Please read it carefully, and familiarise yourself with the craft before using it.

Naturally, the owner's manual is not a course on boating safety or seamanship. If this is your first craft, or you are changing to a type of craft you are not familiar with, for your own comfort and safety, please ensure that you obtain handling and operating experience before "assuming command" of the craft. Your dealer or national sailing association or yacht club will be pleased to advise you of local boating schools, or competent instructors.

This owner's manual is not a detailed maintenance or trouble shooting guide. In case of difficulty please contact the dealer. Always use qualified and competent people for the maintenance, repair and modification of the boat. Modifications that may affect the safety characteristics of the craft shall be assessed, executed and documented by competent people. The manufacturer is not responsible for modifications he has not approved.

Always keep your boat in a good condition and be aware that the boat requires maintenance and servicing. Any craft – no matter how strong it may be, can be severely damaged if not used properly. Always adjust the speed and direction of the craft to sea conditions.

All persons should wear a suitable buoyancy aid (Life jacket/Personal Flotation Device) when on deck.

We wish you many enjoyable times on-board your Yamarin 80 Day Cruiser!

Konekesko Marine
P.O. BOX 145
FIN-01301 VANTAA

Telephone +358 10 5311
www.yamarin.com

PLEASE KEEP THIS MANUAL IN A SECURE PLACE, AND HAND IT OVER TO THE NEW OWNER IF YOU SELL THE CRAFT.

Table of contents	
1 General	6
1.1 Declaration of conformity	6
2 Definitions	10
3 Warranty	10
4 Before use	10
4.1 Registration	10
4.2 Insurance	10
4.3 Training	11
5 Characteristics and use of your boat	11
5.1 General	11
5.2 Basic data	11
5.3 Maximum recommended number of passengers	14
5.4 Loading	15
5.5 Engine and propeller	15
5.6 Prevention of water incursion and stability	15
5.6.1 Hull and deck thru fittings and closing valves	15
5.6.2 Stability and buoyancy	17
5.7 Avoiding the risk of fire or danger of explosion	17
5.7.1 Refuelling	17
5.7.2 Other fuel burning systems (heater and stove)	18
5.7.3 Fire protection	20
5.8 Main switches and fuses	21
5.9 Operation	23
5.9.1 Controls	23
5.9.2 Emergency switch	23
5.9.3 Gearshift and throttle	24
5.9.4 Adjusting of trim angle	24
5.9.5 Starting the engine	25
5.9.6 Driving	26
5.9.7 Approaching and leaving the dock	27
5.9.8 Using the canopy	28
5.9.9 Windshield front door	28
5.9.10 Steps, sharp corner of windshield and cabin sliding door	28
5.9.11 Cabin lights	29
5.10 Proper use – other recommendations and guidelines	29
5.10.1 Man- overboard	29
5.10.2 Securing loose equipment	29
5.10.3 The sliding door to the forward cabin	30
5.10.4 Respect for the environment	30
5.10.5 Use of toilet and waste tank	30
5.10.6 Anchoring and mooring	31
5.10.7 Towing	32

5.10.8 Trailer transport	33
5.10.9 Docking	34
6 Servicing and maintenance	35
6.1 Washing and cleaning the boat	35
6.2 Care instructions for seat cushions	35
6.3 Care instructions for the synthetic teak	36
6.4 Care instructions for the canopy	36
6.5 Care instructions for the windshield	36
6.6 Care instructions for the stainless steel components	36
6.7 Care instructions for the electric remote control	36
6.8 Care instructions for the steering system	36
6.9 Care instructions for electrical components	37
6.10 Minor superficial repairs	37
7 Winter storage	38
7.1 Measures before winter storage	38
7.2 Measures before launching	38
8 Lay-out	40
8.1 General lay-out	40
8.2 Fuel system	43
8.3 Steering system	44
8.4 Electrical system	45
8.5 Wiring diagram	46
8.5.1 Switch / fuse panel	46
8.5.2 Main switch	47
8.5.3 Cabin light switches	48

BEFORE YOU SET OFF

Familiarise yourself with this owner's manual.

Always check at least the following items before leaving:

- **Weather conditions and forecast**

Take the wind, waves and visibility into account. Are the design category, size and equipment of your boat, as well as the skills of the skipper and crew adequate for the water area you are aiming for? During use, hull windows and other hatches must be battened down to prevent water incursion

- **Loading and stability**

Do not overload the craft and distribute loads appropriately. To avoid impairment of the craft's stability, do not place heavy items high up. Please consider that the stability of the boat is reduced if people stand up when on-board during use.

- **Passengers**

Ensure that there is Personal Flotation Device or Lifejackets for all people on-board. Agree crew tasks before setting off.

- **Fuel and fuel system**

Make sure that the boat has enough fuel. Keep in mind that rough conditions at sea impact on fuel consumption and that it can increase by more than 30% when compared to calm conditions. As a rule of thumb you should aim for there being at least 20% left in the tank when arriving at your destination. Regularly check the fuel filter to ensure that there is no water in the moisture trap located under the fuel filter itself. The fuel filter should be changed 1-2 times per year depending on engine hours and quality of fuel.

- **Engine and manoeuvring equipment**

Check the function and condition of steering, batteries and remote control and carry out routine checks according to the engine manual

- **Boat's seaworthiness**

Check the boat's seaworthiness: no fuel or water leaks are permitted, safety equipment must be available on-board etc. Check that there is no water in the bilge!

- **Fastening of equipment**

Check that all equipment and heavy items are positioned so that they are held in place during travel at sea and high winds. Please note that the seat cushions may fly over board if they are not fixed properly with press studs.

- **Nautical charts**

If you are not navigating in familiar waters, ensure you have nautical charts on-board that cover a large enough area. If your boat is equipped with a chart plotter, familiarise yourself with it before setting off. Ensure that the plotter charts are of the latest edition

- **Leaving the berth**

Agree with the crew who will release each mooring line, etc. Be careful not to let mooring lines or the anchoring line to tangle in the propeller during manoeuvring.

- **Obligatory equipment**

What is considered obligatory equipment varies from country to country. Find out what is required for your boat.

You will find additional instructions concerning the engine in a separate manual

1 General

The owner's manual will help you to become familiarised with the properties and features of your new boat, as well as with its care and maintenance. Separate manuals for installed equipment are attached and are referred to in many sections of the owner's manual. You can, of course, complement this owner's manual by adding the manuals of devices which are installed afterwards. There is also space for your own notes at the end of this manual.

The craft has a running serial number, CIN-code (Craft Identification Number). The CIN-code can be found on the starboard side of the transom just below the rub rail. We recommend that you write down the CIN-code in the declaration of conformity in this book. When contacting the dealer, please provide the CIN-code and the type of craft. This helps in delivering the correct spare parts.

1.1 Declaration of conformity

Type of craft:	Deck:
01 sailboat	01 decked
02 inflatable	02 partly decked
03 other: motorboat	03 open:
Type of hull:	Propulsion:
01 monohull	01 sails
02 multihull	02 petrol engine
03 other:	03 diesel engine
	04 electrical motor
	05 oars
	06 other:
Construction material:	Type of engine:
01 aluminium, aluminium alloys	01 outboard
02 plastic, fibre reinforced plastic	02 inboard
03 steel, steel alloys	03 z or stern drive
04 wood	04 other:
05 other:	

Essential safety requirements	ISO-standards used	Other normative document used
General requirements (2)		
Basic information	EN ISO 8666:2002	
Hull Identification Number – CIN (2.1)	ISO 10087:1996 / A1:2000	
Builder's Plate (2.2)		RCD annex I, 2.2
Protection from falling overboard... (2.3)	EN ISO 15085:2003	
Visibility from the main steering position (2.4)		RSG Guidelines, EN ISO 11591, NBS F10
Owner's manual (2.5)	EN ISO 10240:2004	
Structure (3.1)		RSG Guidelines, NBS-VTT Extended rule
Stability and freeboard (3.2)	EN ISO 12217:2002	
Buoyancy and floatation (3.3)	EN ISO 12217:2002	
Openings in hull, deck and superstructure (3.4)	ISO 9093-1:1994	
Water incursion (3.5)	EN ISO 15083:2003, ISO 8849:1990	
Manufacturer's maximum recommended load (3.6)	EN ISO 12217:2002, EN ISO 14946:2001	
Life raft stowage (3.7)		RSG Guidelines
Evacuation (3.8)	EN ISO 9094-1:2003	
Anchoring, mooring and towing (3.9)	EN ISO 15084:2003	
Handling characteristics (4)	EN ISO 11592:2001	
Installation requirements (5)		
Engines and engine spaces (5.1)		
Inboard engine (5.1.1)		
Ventilation (5.1.2)		
Exposed parts (5.1.3)		
Starting the outboard engine (5.1.4)		
Fuel system (5.2)	EN ISO 10088:2001, EN ISO 11105:1997	
General – fuel system (5.2.1)		
Fuel tanks (5.2.2)		
Electrical systems (5.3)	EN ISO 10133:2000, ISO 8846:1990	
Steering system (5.4)	EN ISO 10592:1994/A1:2000	
General – steering system (5.4.1)		
Emergency arrangements (5.4.2)		
Gas system (5.5)		
Fire protection (5.6)	EN ISO 9094-1:2003	
General – fire protection (5.6.1)		
Fire-fighting equipment (5.6.2)		
Navigation lights (5.7)		1972 COLREG
Discharge prevention (5.8)	EN ISO 8099:2000	

2 Definitions

The warnings and cautions in this manual are defined as following:

DANGER! Denotes an extreme intrinsic hazard exists which would result in high probability of death or irreparable injury if proper precautions are not taken.

WARNING! Denotes a hazard exists which can result in injury or death if proper precautions are not taken.

NOTE! Denotes a reminder of safety practices or directs attention to unsafe practices which could result in personal injury or damage to the craft or components.

The units used in this manual are in accordance with the SI-system. In some cases other units have been added in brackets. An exception is the wind speed, where the Beaufort scale is used in the recreational craft directive.

3 Warranty

The boat and the equipment installed at the boat factory are guaranteed for one year, starting from the first day of use. Please contact your dealer in relation to any potential warranty issues. Please remember to provide the CIN-code! If possible, please provide a digital photograph of the subject of your claim. This usually speeds up the claims process.

4 Before use

4.1 Registration

Registration regulations vary from country to country. Find out what is required in relation to your own boat.

4.2 Insurance

Boat insurance can compensate damage occurring on water or during transport and lifting. Check insurance liability separately when lifting the boat. Insurance also has an indirect effect on safety at sea: In the event of a serious accident or damage, you must, above all, concentrate on saving people. Insurance companies will be able to give more information about different insurance alternatives. Be particularly careful to check insurance liability when you lift and transport the boat!

4.3 Training

No one is a born sailor. There is plenty of boating literature available. Navigation courses are arranged by local yacht clubs or national boating associations where you can gain basic skills. However, please remember that you only become confident in boat handling, navigation, docking and anchoring after long practical experience.

5 Characteristics and use of your boat

5.1 General

The owner's manual is not meant to be a complete service or repair manual, but to guide the user to know the characteristics of the boat and to use his/her boat in a proper way

5.2 Basic data

Recreational crafts can be constructed according to 4 categories (A, B, C and D) according to the recreational craft directive 94/25/EC. Yamarin 80 DC is constructed according to category C. Below you will find information on what each category means:

Category A: The boat is built for conditions where the wind can exceed 8 Beaufort (approx. 21 m/s) and where the significant height of the waves (please refer to note below) can exceed 4m. In such circumstances the boats are largely self-sufficient. Category A does not include abnormal conditions such as hurricanes. Such conditions may be encountered on extended voyages, for example across oceans, or in coastal areas where there is an open expanse of sea for several hundred nautical miles off the coast.

Category B: The boat is built for conditions where the wind reaches a maximum of 8 Beaufort (approx. 21 m/s) and where the significant height of the waves (please refer to note below) does not exceed 4m. Such conditions may be encountered on offshore voyages of sufficient length or on coastal waters when unsheltered from the wind and waves for several dozens of nautical miles. These conditions may also be experienced on inland seas of sufficient size for the wave height to be generated.

Category C: The boat is built for conditions where the wind reaches a maximum of 6 Beaufort (approx. 14 m/s) and where the significant height of the waves does not exceed 2 m (please refer to note below). Such conditions may be encountered on exposed inland waters, in estuaries, and in coastal waters in moderate weather conditions.

Category D: The boat is built for conditions where the wind reaches a maximum of 4 Beaufort (approx. 8 m/s) and where the significant height of the waves (please refer to note below) does not exceed 0.3 m and the height of the greatest waves is no more than 0.5 m. Such conditions may be encountered on protected waters on lakes and in coastal areas during fine weather conditions.

Note: Significant wave height is a term used when planning to build a boat. The significant wave height is the mean height of the highest one third of the waves, which approximately corresponds to the wave height estimated by an experienced observer. In the event that the significant wave height is 2.0 m the mean height of all waves is roughly 1.2 m.

Maximum recommended load: *See technical specifications*
Please also refer to section 5.4 “Loading”.


Main dimensions and capacities: *See technical specifications*
Craft length, width, total weight etc. as well as tank capacities are shown in technical specifications.

Builder’s plate: Part of the previously mentioned information is given on the builder's plate, which is affixed next *to the driver’s seat*. A full explanation of this information is given in the relevant sections of this manual.

Technical specifications

Model	YAMARIN 80 DC	
Design category	C	
Overall length (swim ladder not included)	8,08 m	
Width	2,60 m	
Weight without engine, fluids and equipment	Approx. 1850 kg	
Weight on trailer with biggest recommended engine	Approx. 2490 kg Includes the boat (approx. 1850 kg) and Yamaha F350 hp -engine (365kg) and estimated weight of fluids and equipments (275 kg). NB! This is not the maximum weight of fluids and equipments.	
Weight on trailer with smallest recommended engine	Approx 2403 kg Includes the boat (n. 1850 kg) and Yamaha F250 hp - engine (278 kg) and estimated weight of fluids and equipments (275 kg). NB! This is not the maximum weight of fluids and equipments.	
Maximum weight of load / Maximum number of passengers	1010 kg 8 persons	
Max load includes	600 kg / 8 persons (à 75 kg) + personal equipments 80 kg + basic equipments 30 kg + fuel 200 kg fresh water 40 kg + waste 30 kg + life raft 30 kg	
Maximum load on builder's plate (CE-sign)	740 kg Includes persons 8 x 75 kg = 600 kg personal equipments 80 kg + basic equipments 30 kg + life raft 30 kg = tot. 740 kg	
Weight at full load	3265 kg Includes boat 1850 kg + batteries 40 kg + engine 365 kg + basic equipments 30 kg + personal equipments 80 kg + fuel 200 kg + fresh water 40 kg + waste 30 kg + life raft 30 kg + persons 600 kg	
Maximum engine power	258 kW/ 350 hp	
Weight of maximum recommended engine	365 kg	
Fuel tank capacity	261 litres	
Max draught at full load, engine up	600 mm	
Max height from water line at light load	1600 mm	
Construction material	Glass fibre reinforced polyester resin	
Colour codes:		
- Hull	Ashland 10015	RAL 9016
- Deck	Ashland 10015	RAL 9016
Hydraulic hoses	2 x 2,5 m 2 x 3,5 m	
Max speed at speed test	Approx. 50 knots	

Yamarin 80 DC water line:

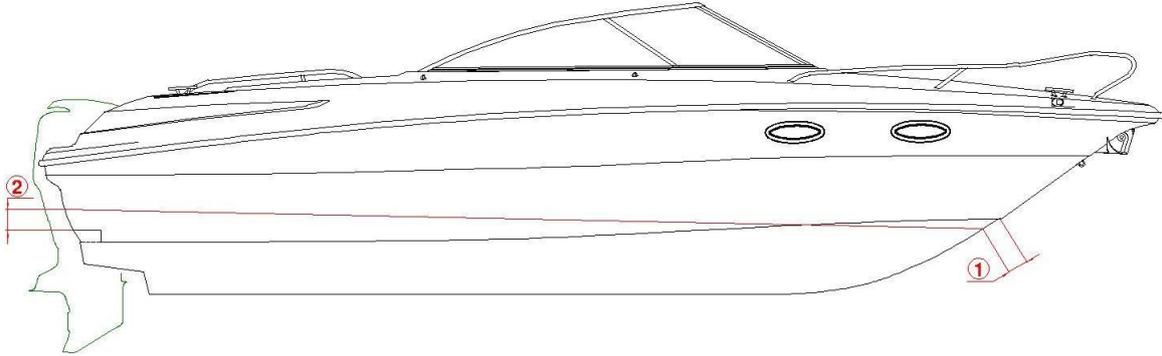

Water line:

- | | |
|------------|-------------------------------------------------------------------|
| - At stern | From chine 140 mm up with Yamaha F350 and 120 mm with Yamaha F250 |
| - At bow | From chine 140 mm down |


5.3 Maximum recommended number of passengers

The maximum recommended number of passengers on board Yamarin 80 DC is 8 persons.

WARNING!

Do not exceed the maximum recommended number of passengers. Regardless of the number of passengers the total weight of persons and equipment must never exceed the maximum recommended load (please refer to section 5.4 “Loading”). During the voyage all passengers must remain seated on the seats.

Seats of Yamarin 80 DC:

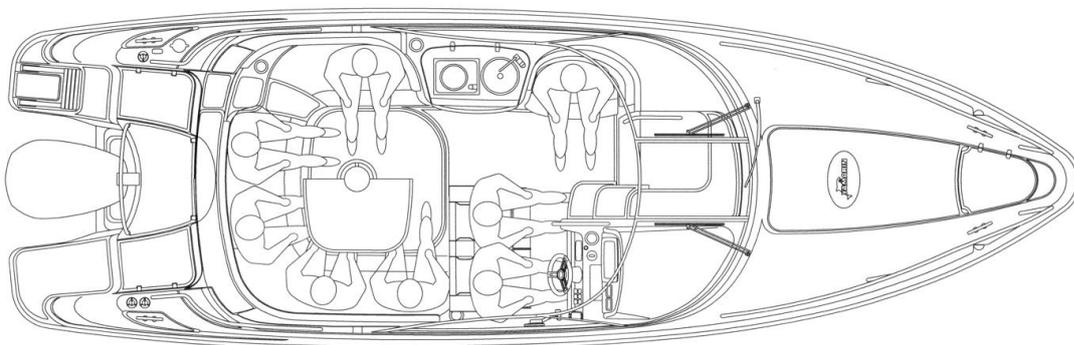

5.4 Loading

The maximum permitted load for the Yamarin 80 DC is 1010 kg. This load includes the following weights:

- a) the total weight of passengers 600 kg (the default weight of an adult is assumed to be 75 kg and that of a child 37,5 kg)
- b) basic equipment 30 kg
- c) consumable liquids (fresh water, fuel etc.) in fixed tanks 240 kg
- d) personal equipment (e.g. hobby equipment and overnight equipment) 80 kg
- e) the weight of supplies and other stores (full septic tank) 30 kg
- f) possible life raft 30 kg

NOTE!

The maximum permitted load includes only weights mentioned above.

WARNING!

When loading the craft, never exceed the maximum recommended load. Always load the craft carefully and distribute loads appropriately (roughly an even keel). Heavy equipment should usually be placed in the storage compartment under the aft seat. If the maximum numbers of passengers are on-board you should place the heavy equipment in the cabin to ensure that the craft does not become tail-heavy. Always avoid placing heavy weights high up.

5.5 Engine and propeller

The maximum recommended engine power for the Yamarin 80 DC is 350 hp (258 kW). The construction of the boat is not designed to bear more power than 350 hp. The maneuverability of the boat can be very dangerous if the boat has bigger engine than 350 hp. The warranty is not valid if boat is used with more power than 350 hp. Follow the dealer's instructions when choosing the propeller for your craft.

NOTE!

Avoid turning the engine when the hatch of the engine well is resting on the engine housing. The warranty does not cover any damage to the engine housing caused by the hatch of the engine.


5.6 Prevention of water incursion and stability

5.6.1 Hull and deck thru fittings and closing valves

The Yamarin 80 DC has a rainwater draining system, which means that rainwater is drained from the undecked part of the boat when the boat is on the water. The system also functions when the boat is out of water, provided that the bow is higher than the stern. The closing valve (number 2 in the next picture) is located under the back seat. This drain valve is meant to be shut at maximum load to prevent potential water incursion. **In other loading conditions the drain valve should remain open.**

The boat has two bilge pumps, a hand pump and an electric pump. The electric bilge pump has a capacity of approx. 65 l/min and the hand pump has a capacity of 0.5 l/pull. Refer to the next image to locate the pumps.

Yamarin 80 DC rainwater draining system:

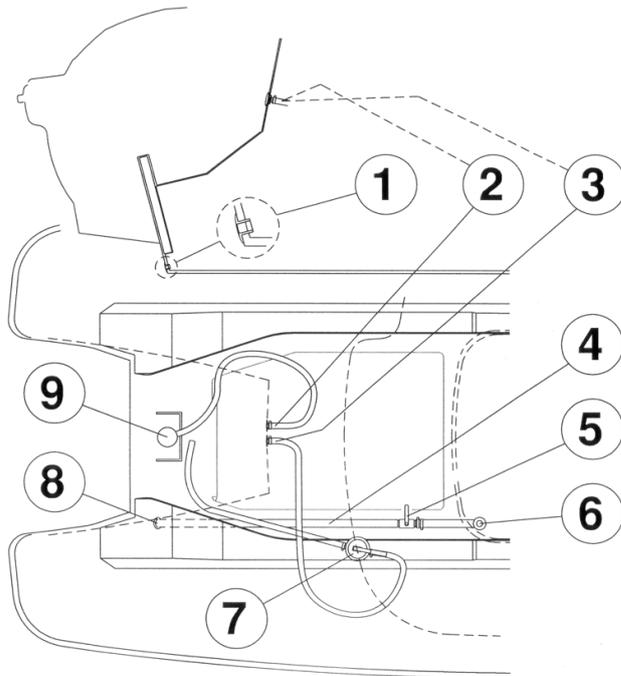

- | | |
|------------------------------------------|------------------------|
| 1. Drain plug | 6. Drain thru fitting |
| 2. Electric bilge pump deck thru fitting | 7. Manual bilge pump |
| 3. Manual bilge pump deck thru fitting | 8. The shut-off flap |
| 4. Drain pipe | 9. Electric bilge pump |
| 5. Rainwater drainage valve | |

The owner of the boat is responsible for ensuring that there is at least one baler or bucket on the boat and that it has been secured.

WARNING!

The bilge pump system is not intended to cope with a leakage caused by running aground or other equivalent damage.

PRECAUTION!

Refer to the next image to locate the pumps. Regularly check to ensure that there is no debris at the end of the suction hoses for each of the pumps. You can access the electrical pump by doing the following: Screw off the bottom plate (plywood plate) under the aft seat. The bilge pump is located in a case and you can just lift it up as it is not fitted with screws. Clean out the bottom layer in the bilge pump by letting it down into its case. The end of the hand pump's suction hose is situated between the fuel tank and the transom, and can be reached by screwing off the bottom plate under the aft seat.

- WARNING!** Always keep the drainpipe shut when its inboard end is constantly below the waterline due to the load. The shut-off flap on the transom only prevents water from entering the boat when reversing!
- NOTE!** Make sure that water can flow unobstructed through the drainpipe. For instance, autumn leaves may obstruct the water flow, which can cause the boat to fill with water and sink. The bilge pump system does not work in conditions below 0°C.
- NOTE!** There is always some amount of condensed water in the bilge. As the boat ages, there is a risk that a small amount of water may come through the hull bushings. Always remember to check the bilge, via the inspection hatch under the aft seat, before you leave the boat at quay or buoy and always before setting off. Have an authorised repair shop check for possible leaks.
- WARNING!** The boat's handling properties may become extremely dangerous, if there is water in the bilge.
- WARNING!** The boat's hull windows should be closed when underway. Close the hull windows also when you leave boat at quay or buoy. In rough weather, the hatches, drawers and doors should be kept shut to minimise the risk of them filling with water.

5.6.2 Stability and buoyancy

Please note, that stability is reduced by any weight added high up. Any change in the distribution of the weight onboard may significantly affect the stability, trim and performance of your craft. However, please remember that large breaking waves always present a serious danger to stability. The boat does not float if filled with water. In accordance with the Recreational Craft Directive boats with a length of 6 metres or more do not need to float if filled with water.

5.7 Avoiding the risk of fire or danger of explosion

5.7.1 Refuelling

Shut off the engine and extinguish any cigarettes before starting to refuel. During refuelling, do not use switches or appliances that can cause a spark.

If the nozzle shuts off while you are refuelling, you should rotate the nozzle by 90 degrees to prevent the jet from landing directly on the chain mounting screw.

When filling the fuel tank, do not use a plastic funnel, as this prevents discharge of the static electricity between the fuel nozzle and the filling fitting.

Useful tips: As your boat has a synthetic teak deck and you are concerned about fuel spillage when refuelling, we recommend that you wet the teak surface with water before refuelling.

You can also keep a rag on top of the fuel bushing to prevent the fuel from splashing onto the deck.

Always keep a spare can of fuel onboard. A suitable place for stowing the spare can, especially considering fire safety, is either of the anchor boxes in the stern. There is no risk of gasified fuel coming into contact with battery compartments or the electrical system from either of these boxes.

Do not stow any loose items under aft seat that, if moved, could prevent fuel from going to the engine. This is particularly important for items that may move against hoses running to or from the fuel filter. Check annually that the fuel hoses are not worn at lead-ins.


Please note that, depending on the trim of the boat or the boat's heeling angle, it might not be possible to use the full capacity of the tanks.

WARNING ! Petrol vapours are explosive. Extreme caution must be exercised and these instructions must be followed when refuelling. The smell of petrol always means that there are petrol vapours in the boat.

5.7.2 Other fuel burning systems (heater and stove)

The stove and the cabin heater (optional equipment) have separate user manuals and therefore they are not covered in this owner's manual. The fuel tank for the stove and the heater, if applicable is located under the larboard side aft seat. Use only good quality paraffin as fuel. . Before you start to refill or replace the petrol tank you should turn off the stove and the cabin heater. When handling paraffin, do not use appliances or equipment that could cause sparks. Wipe up any spilled paraffin immediately.

Yamarin 80 DC stove and heater (accessory):

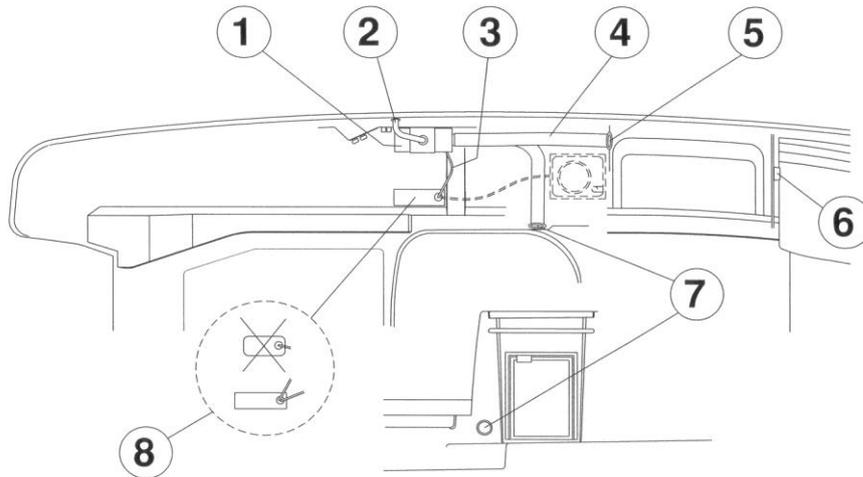

- 1. Place for heater
- 2. Place for heaters air vent
- 3. Lamp oil hose
- 4. Hot air blow tube
- 5. Blow-off screen in the cabin

- 6. Place for heater switch, above the cabin door
- 7. Blow-off screen
- 8. Lamp oil tank (if a lamp oil heater has been installed to the onboard heater)

Pantry switches in Yamarin 80 DC:



- 1. Stove control switch
- 2. Stove power switch

- 3. Fresh water pump switch
- 4. Fresh water tab

NOTE!

The pantry cover is made of tempered glass. Tempered glass is durable and can tolerate quite rough treatment, but be aware that the edge of the glass is quite fragile in terms of hits and knocks. Be aware of the risk of breaking the pantry cover, when it is let down,

make sure that the stove is not in use and that there is nothing on the stove or in the sink that can damage the cover. The cover must be closed with the cover lock when the craft is moving.

WARNING!

To minimise the risk of fire, the wooden cover of the pantry wash basin should always be turned on when the wash basin is not in use. The sunbeams may focus on one point on the basin's concave mirror surface and could then reflect onto a dish rag or any other incendiary material. This fire hazard has to be taken very seriously. The pantry cover does not provide enough protection against sunbeams even when it is closed.


NOTE!

If there is an onboard lamp oil heater (accessory) do not shut the blow-off screens while the heater is on. Otherwise the heater can overheat and the overheating protection is engaged.

5.7.3 Fire protection

The boat is equipped with a portable 2 kg fire extinguisher class 8A 68 B. *The portable fire extinguisher must be serviced annually by an authorised inspector.* In the event that the fire extinguisher is replaced the capacity of the new one should be the equivalent of the old one. You will see where the fire extinguisher is located on the image below.

Location of fire extinguisher in Yamarin 80 DC:

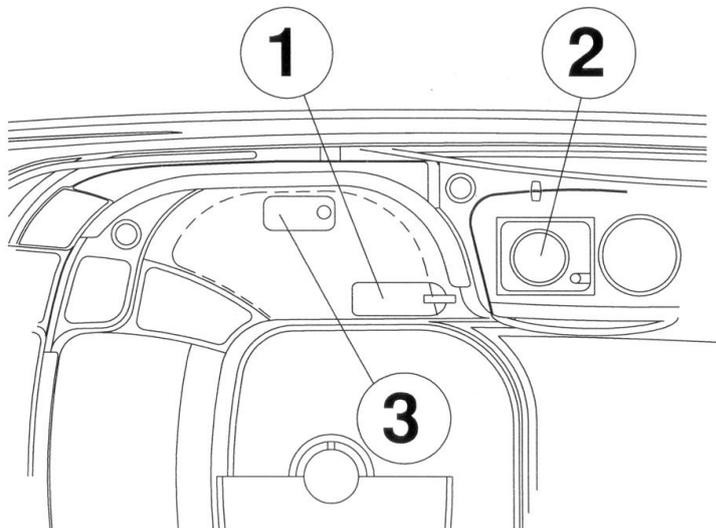

1. Fire extinguisher
2. Stove
3. Fuel tank for stove

Ensure that fire-fighting equipment is readily accessible even when the boat is loaded. Inform members of the crew about the location and operation of fire-fighting equipment.

Remember:


- Never block passages to exits and hatches
- Never hinder access to safety equipment, for instance the fuel vents, the gas vents or the switches to the electric system.
- Never hinder access to fire extinguishers located in a cabinet
- Never leave the boat unsupervised when the stove or the cabin heater is being used
- Never make changes to any of the boat's systems (especially the electricity or the fuel systems) or allow an unqualified person to make changes to any of the boat's systems
- Never fill a fuel container when the appliance in question is being used or when the stove or cabin heater is being used
- Never smoke when handling petrol or gas.

5.8 Main switches and fuses

Main switches operation:

- Switch clockwise → battery connected
- Switch counter clockwise → battery disconnected

Use the main switches to turn off the power when you leave the boat and always switch both of them on when the boat is in use.

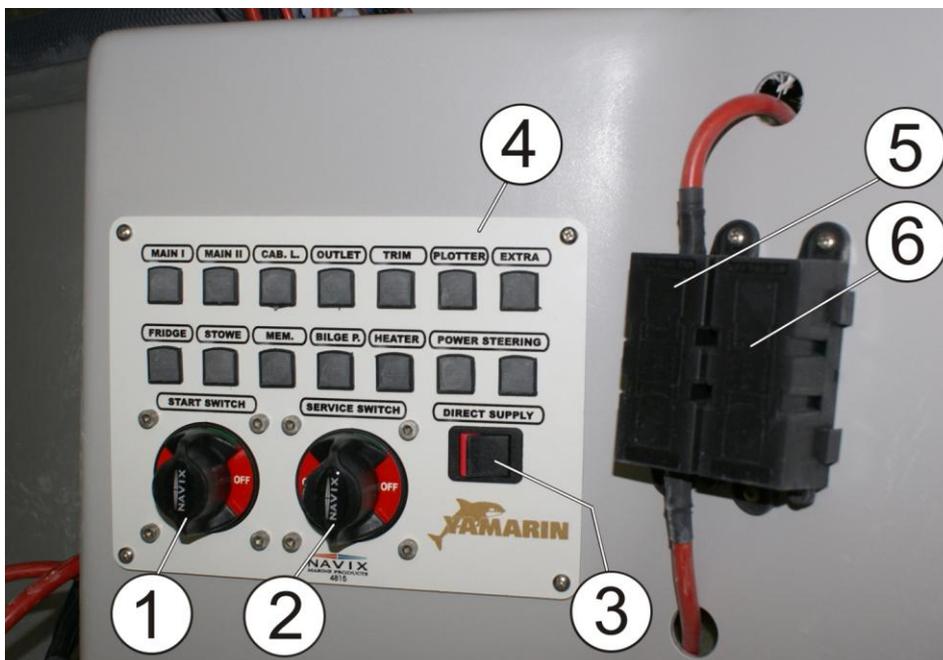

- | | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Main circuit switch for the engine 2. Main circuit switch for main power 3. Direct supply switch* 4. Fuse panel | <ol style="list-style-type: none"> 5. Bow propeller fuse 6. Aft anchor winch (accessory) fuse |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|

*Switched on when the red mark shows.

The circuit fuses have been placed next to the main switch and the control point. The fuse sizes have also been indicated in the electricity diagram. Do not change the fuse amperages or install any components that exceed the nominal amperage of the circuit in the electric system.


Always turn off the power by using both main switches and, conversely, switch both of them on. Switch off the power also when you carry out electric installations. Do not turn off the direct supply (in Figure 3 above: Direct Supply) if you want the electric bilge pump to function in your absence. However, remember to turn off the refrigerator, stove, map plotter, radio, etc. All equipment of this kind relies on the direct supply.

NOTE ! Also turn off the power if you need to carry out electrical installations.

NOTE ! Never switch off the main switch when the engine is running! This could cause serious damage to the engine's electrical system.

NOTE ! Do not carry out electrical installations (such as changing light bulbs) while the power is on. Make sure any major electrical installations are carried out by a professional.

Yamarin 80 DC fuse panel located at bench board:

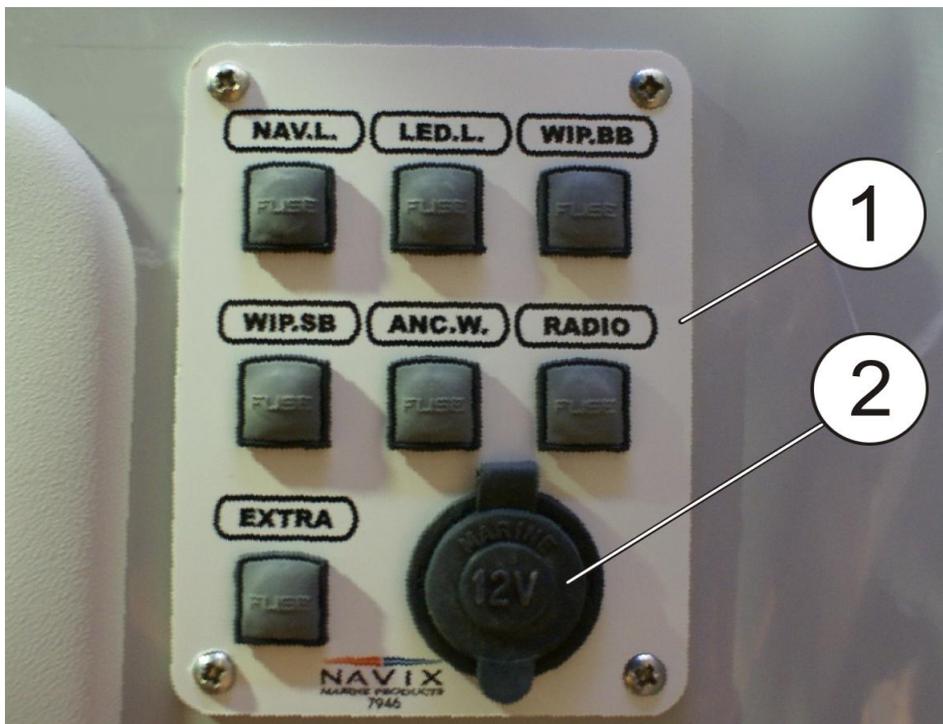

1. Fuses
2. 12-V power outlet


5.9 Operation

If this is your first boat or a boat type new to you, take someone with experience from a similar boat with you the first few times.

5.9.1 Controls

You will quickly learn how to control your Yamarin 80 DC, but constantly changing weather conditions, like wind and waves, will always present new challenges for the driver. The remote control combines the functions of throttle, forward and reverse gears, and the adjusting of the engine trim angle. The boat has a hydraulic steering system.

Controls of Yamarin 80 DC

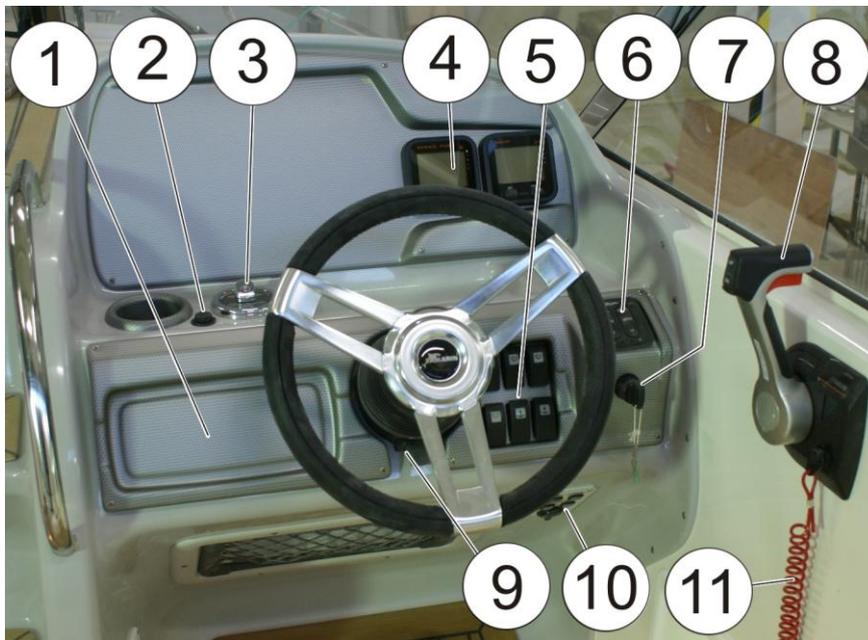

- | | |
|----------------------------------|------------------------------------------------|
| 1. Place for radio | 7. Ignition key |
| 2. Hydraulic steering oil refill | 8. Electrical remote control |
| 3. Bow propeller control unit | 9. Angle adjustment of the tilt steering wheel |
| 4. LAN 2 -gauges | 10. Fuse panel |
| 5. Switch panel | 11. Emergency switch |
| 6. Trim switches | |

5.9.2 Emergency switch

The emergency switch is a device with one end attached to the switch under the remote control and the other end to, for instance, your life vest. The emergency switch automatically switches off the engine when detached from the remote control. It is very important that the boat comes to a halt in the event that the driver, for whatever reason, loses his/her balance and is flung from the helm.

NOTE! Never take control of the boat without having attached the emergency switch to yourself. If you attach it to your arm, do not steer the boat with that hand, because the lanyard may twist around the steering wheel.

NOTE! The engine will not start if the emergency switch is not attached to the switch on the remote control.

DANGER! A rotating propeller presents a life-threatening danger to a swimmer or a person that has fallen overboard. Use an emergency switch to turn off the engine always when a swimmer or water skier is about to re-enter the boat from the water.

5.9.3 Gearshift and throttle

The engine is put into gear by pushing the button on the gear/throttle handle upwards with your fingers, and by pushing or pulling the gear/throttle lever forward or backward depending on which direction you are planning to set out. When the engine is in gear, you adjust the boat speed with the same gear/throttle lever.

When the boat is travelling forward slowly, you can use the reversing gear for braking, for instance, when approaching the quay. Shifting into reverse must not be done if the boat is travelling at higher speeds, because it damages the engine.

5.9.4 Adjusting of trim angle


The following are the main rules when adjusting the trim angle:

- When bringing the boat to plane, keep the "bow down" position
- When the boat is planing, and in the event that the sea is still, the bow is lifted until you can feel that both the engine and the boat move very easily. In calm water, the engine should normally be trimmed up at least 3 scale marks on the trim indicator on the rev counter. If engine is trimmed up too much, the speed of the boat is reduced. If the boat is trimmed too low, both boat and engine run heavily. To achieve good fuel economy it is important to drive the boat with the right engine trim angle.
- In a heavy sea lower the bow to allow it to slice through the waves better, thus providing a smoother ride.
- In following waves, raise the bow to avoid "diving" into the waves.

WARNING! Do not drive the boat at high speeds with the engine trimmed up (bow up) as there is a risk of sudden heeling when the propeller hits the water again after a flight in heavy waves. Likewise do not drive at high speed with the engine completely trimmed down (bow down) since this can cause the boat to pitch unexpectedly when it hits the water.

It is possible, **using the boat's trim**, to correct the sideways heeling to ensure that the boat is moving completely upright both when there is a side wind as well as when the boat is unevenly loaded. It is true to say that all planing boats lie against the wind. However, when the boat is equipped with trim tabs, its direction can be straightened by putting down the windward trim tab. This enables the boat to run much more smoothly through the waves. If you want to reduce the impact of waves even further, you can trim up windward, which causes the waves to go more under the bottom of the boat.

Yamarin 80 DC trim system:

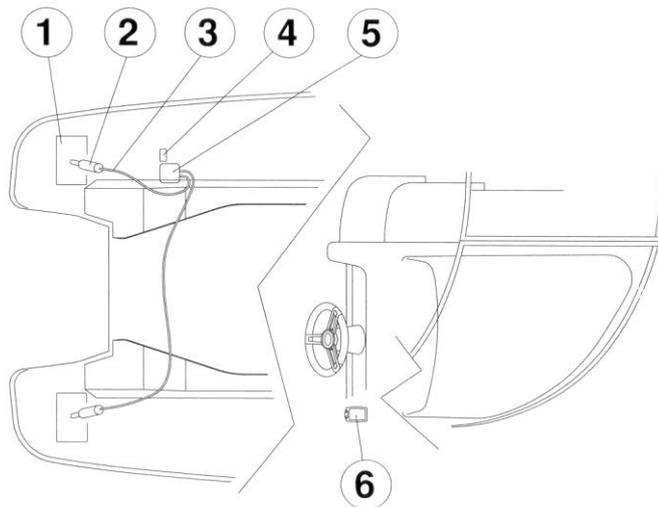

- | | |
|------------------|----------------------|
| 1. Trim tab | 4. Trim control unit |
| 2. Trim cylinder | 5. Trim pump |
| 3. Trim hose | 6. Trim switches |

WARNING!

Adjust the trim tabs with care when at high speed – it dramatically changes the behaviour of the boat. Do not run the boat with the bow too much down, as the boat can pitch unexpectedly.

WARNING!

Waves reduce manoeuvrability and make the boat heel. Take this into account by reducing the speed when encountering heavier seas.

5.9.5 Starting the engine

1. Switch on the engine using the main switch.
2. Lower the engine to the driving position by pressing the Power Trim button on the gear/throttle handle.
3. Check that the gear/throttle handle is in the neutral position and that the emergency switch is attached to the bottom of the remote control.
4. Switch on the current, using the start key, without starting the engine and wait a few seconds until the warning lights light up.
5. Start the engine by turning the ignition key clockwise, until it starts. If everything is correct the engine should start within 1-2 seconds. If the engine does not start you should not “crank” the starter engine for more than 10 seconds at any one time.
6. After the engine has started, let it idle for a few minutes before setting off. (Please refer to the engine manual!)

For more detailed information, please refer to the engine manual.

5.9.6 Driving

It is easy to drive when the weather is fine and the sea is calm. Do not, however, forget the importance of keeping an adequate lookout. In order for the visibility from the driver's seat to be as good as possible you should:

- ensure that passengers do not restrict your visibility
- do not drive near planing speed for long periods, as the bow up comes up and reduces visibility
- when visibility is poor, look over the windshield
- remember to also keep a lookout behind you, particularly in shipping lanes and heavily trafficked routes

NOTE! Use proper navigation lights after dark.

Always adjust your speed to the conditions and the environment. Take into account the following:

- waves (also consult the passengers about a comfortable speed)
- your own bow wake (greatest at planing speed, least at speeds under 5 knots)
- visibility (islands, fog, rain, driving against the sun)
- familiarity with the route (sufficient time for navigation)
- the width of the route (other traffic, noise and wash on shore)
- make sure, that there is always sufficient distance to avoid collision. Distance must be so big that there is time to stop the boat or to take evasive action.

When running at low speed, a planing boat's directional stability is poorer than at higher speed. So be careful in narrow passages and when meeting other boats.

It is therefore important that you follow the international regulations on how to avoid collisions at sea = COLREG. Navigate with care and use new or updated nautical charts.

The running position of the boat greatly affects its driving characteristics and fuel consumption. The boat's best operational position may be achieved by:

- placing the load properly
- adjusting the engine's trim angle

The combination of the right operational position with the right speed also makes driving in open waters more comfortable and safer.

WARNING! High speed and quick manoeuvring, in a rough sea, can lead to large heeling angles and loss of control over the boat.

NOTE! The boat is not designed to be driven through conditions that cause it to jump waves. Yamarin warranty does not cover damages, which are caused from excessive jumping in waves with boat. Engine being airborne can be tracked down by authorized Yamaha servicemen from the Yamaha engines computer.

5.9.7 Approaching and leaving the dock

Practise boat manoeuvring skills where there is ample space to learn how to approach a dock before entering a crowded marina.

A very gentle throttle application does not generate sufficient steering power. Sharp but short throttle applications enable efficient steering movements.

Ensure that everyone on-board who does not have to stand up is seated when you are approaching the dock. Sudden steering movements may cause the boat to sway and someone to get injured.

Before docking, prepare the ropes at stern and bow. Approach the dock bow first at a narrow angle. Just before touching the dock, steer against the dock and shift into reverse. Apply throttle quickly and sharply. The boat will stop and turn parallel to the dock. If possible, make the approach into the wind or current, whichever is the strongest. This makes departing from the dock easier as the wind or current pushes the bow out from the dock. If there is no wind or current the easiest way to depart is by pushing the stern as far away from the dock as possible, and then slowly reversing away from the dock into open water.

The propeller is designed to give its best grip in forward gear. Therefore the propeller performance is weaker in reverse. Neither does the boat have a similar steering response in reverse as in forward gear.

WARNING! Yamarin 80 DC is a fast boat. It does not stop instantly when at planing speed. Slow down in plenty of time before anchoring, beaching or docking. Learn to estimate the distance the boat needs before it stops. Remember that steering control is poor, if there is no traction.

WARNING! Do not try to stop the boat with your hands, and do not put your arm or foot between the boat and the dock, the shore or another vessel! Practise beaching and docking under favourable conditions! Use moderate but firm engine power.

NOTE! When you secure the boat you must take into consideration changes in wind direction, that the water level might rise or sink, any backwash that might occur, etc. You can get more information from insurance companies, etc.

5.9.8 Using the canopy

The canopy is designed so that it is possible to use just the front part if desired. We recommend that you remove the sides of the canopy plus its aft part, and roll the roof cover carefully and lay it down into the canopy box so that it fits easier into the canopy box. It will work easily if you ensure that there is no fabric underneath the straight upper part of the canopy rail. The canopy is designed to take a maximum speed of 30 knots at sea, and 50 km/h in road transport. All press studs must be properly fastened when using the canopy.

NOTE! When raining, the boat must not be used without canopy. The equipment in the cockpit is not water-tight and has to be protected from rain.

5.9.9 Windshield front door

Windshield door must always be closed and locked when driving. The front door is not designed to be used as a rail when you are coming on board or leaving the boat..

WARNING! In heavy sea, strong wind or gusts keep the door closed even in port cause there is a risk of door could be thrown by it selves. Door is heavy and it can cause a serious damage if it hits person on board.

WARNING! When the boat is lying still the door can get closed by a blast or when big waves hit the boat. Because of that you are recommend to keep the door closed when no one is boarding.

5.9.10 Steps, sharp corner of windshield and cabin sliding door

Pay attention when using the stairs; particularly if the cabin's sliding door is open – risk of falling.


NOTE! While you are driving the boat, secure the cabin door with a latch to prevent the door from slamming shut at high speeds.

WARNING! When going up the stairs beware of the left corner of the right windshield in order to not hit knee to it. When coming down the stairs the same corner can hit to ones leg if not being careful enough.

5.9.11 Cabin lights

The figure below indicates the switch for the cabin lights on the Yamarin 80 DC. The switch is situated in the cabin above the corner cabinet.

Light switch in the cabin of the Yamarin 80 DC:

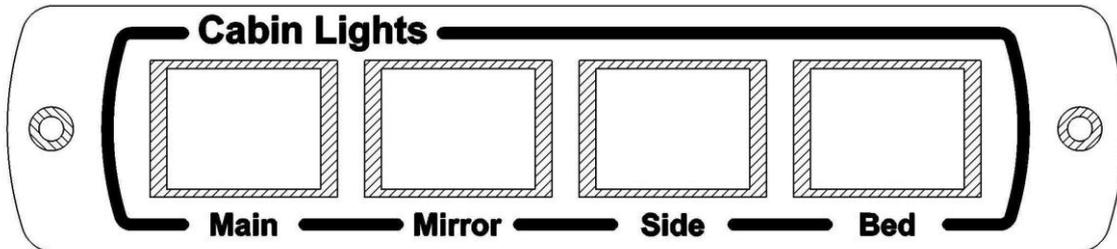

Main = Ceiling light
Mirror = Mirror light

Side = Side light
Bed = Bed light

5.10 Proper use – other recommendations and guidelines

5.10.1 Man- overboard

It is always a serious situation when someone falls overboard. Rescue procedures should be practised in advance when the weather is good, because when someone has fallen overboard, there is no time for practising.

It is always easiest to help a person climb on-board from the water at the stern of the boat. A rope loop attached to the boat helps lifting. The boat's swim ladder extends 30 cm into the water. If a child has fallen overboard, an adult with a life-saving device or a fender must always jump in after the child, however, someone must always remain onboard the boat.

It is very important to maintain visual and verbal contact in the event that a person falls overboard.

DANGER!

A rotating propeller presents a life-threatening danger to a swimmer or a person that has fallen overboard. Use an emergency switch to turn off the engine when a swimmer or water skier is about to re-enter the boat from the water.

5.10.2 Securing loose equipment

Secure all loose equipment before setting off.

5.10.3 The sliding door to the forward cabin

NOTE!

It is advisable to keep the sliding door of the cabin shut while driving. If, however, you wish to keep it in the “open” position while driving slowly, the door should be secured with a latch to prevent it from sliding shut and trapping someone.

5.10.4 Respect for the environment

Our seas, lakes and archipelago are unique and their conservation is a matter of honour for each boater. Therefore you should avoid:

- fuel and oil leakages
- emptying garbage and waste into the water or on the shore
- letting detergents or solvents get into the water
- loud noise both on the water and at the marina
- producing unnecessarily high wash in narrow passages and shallow waters

Service the engine well and run it at the most economical speed, which will also keep exhaust emissions low.


Please also consider other local environmental legislation and regulations. Please make sure to familiarise yourself with the international regulations on the prevention of pollution at sea (MARPOL) and respect these to the greatest possible extent.

5.10.5 Use of toilet and waste tank

As rinsing water toilet uses seawater. When rinsing toilet the waste goes to septic tank. Rinsing water inlet is located under the inspection hatch which is located starboard side of bunk. In normal use valve can be open. In heavy sea we recommended that you close the valve to avoid water overflow.

The capacity of the septic tank is 28 l and it's located in starboard locker. The pump-out deck fitting complies with the standard ISO 8099 and the fitting is located on the side deck at starboard side.

Waste system of Yamarin 80 DC

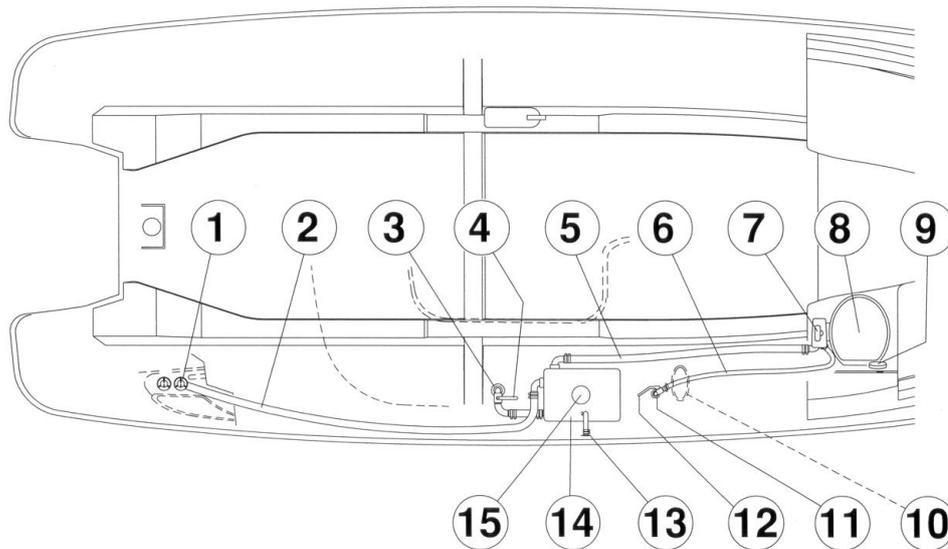

- | | |
|----------------------------------------------------|-----------------------------------|
| 1. Waste tank vacuum emptying | 10. Manhole |
| 2. Waste tank vacuum emptying hose | 11. Thru fitting for water intake |
| 3. Waste tank sea drainage | 12. Valve for toilet water intake |
| 4. Waste tank sea drainage valve | 13. Waste tank vent |
| 5. Sanitation hose from toilet to waste tank | 14. Waste tank |
| 6. Hose for water intake | 15. Waste tank sensor |
| 7. Flushing pump for toilet | |
| 8. Toilet | |
| 9. Monitor of the surface level in the septic tank | |

Empty the septic tank when you leave the harbour by using the suction disposal equipment.

The discharge shutoff seacock to the waste water tank is located next to it. The vent should normally **always remain closed and it should only be opened when emptying the tank into the sea**. Please find out which regulations are in force where you are using the boat in relation to the discharge of grey water.

Mildly alkaline general detergents can be used for cleaning the waste water tank and its hoses. Glycol can be used as an anti-freeze agent. However, the system must be as empty as possible for storage in temperatures below zero.

Always keep the thru hull fitting valve to the waste water tank closed. Only open it if you need to empty the tank into the sea where you are allowed to do so.

5.10.6 Anchoring and mooring

Always moor your boat carefully, even in sheltered places, because conditions can change rapidly. Mooring lines should be equipped with absorbers to dampen any jolts. To prevent abrasion, use fenders that are large enough. The location of the bollards is illustrated on the image in the section on towing.

The endurance of the front bollards forward is at least 23 kN, which is approximately 2,000 kg. Similarly, the endurance of the back bollards backward is 16,0 kN, which is approximately 1,600 kg.

The minimum anchor weight for the boats is 10 kg. When you land to a natural harbour, ensure that there is a sufficient distance from the shore. A moderate grip is attained if the anchor line length is 4-5 times water depth.

WARNING! Do not try to stop the boat by hand and do not put your hand or foot between your boat and the dock, beach, or another boat.

NOTE! When mooring your boat, take wind veering, raise or fall of water level, wake of other boats etc. into account. More guidance can be provided by insurance companies, for instance.

5.10.7 Towing

If you tow another boat, use adequately strong, floating line. Begin the towing carefully, avoid jerks, and do not overload the engine.

The owner of the boat should consider the measures necessary for securing the boat's towrope.


When towing another boat or when your boat is being towed, fasten the towrope to the back of the boat or to the prow bollards as shown in the illustration.

WARNING! When towing, the towline is under high tension. If it breaks, the speed of the end that has snapped off may rebound and cause serious injury or death. Always use a thick enough rope and do not get in the way of the rope extension.

NOTE! When towing another boat or being towed, always drive at a low speed. If the boat has a displacement hull, never exceed the hull speed while towing.

NOTE! The towrope should always be loosely fastened so that it can be unfastened under load.

The location of the anchor bollards during towing, anchoring, and mooring:

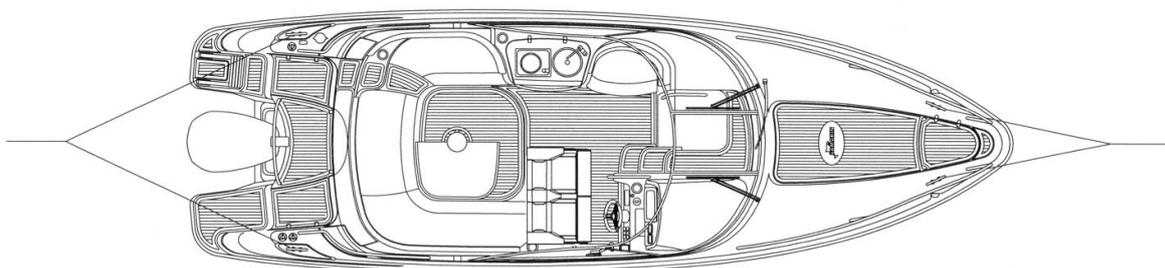


5.10.8 Trailer transport

Weights on trailer can be found from Technical specifications. The keel support of trailer should carry the most of the weight of the boat. Adjust the side supports so that boat can not slide from side to side. For more information, please turn to your dealer.

Before you take boat on trailer clean the supports from sand and dirt, so they won't scratch the bottom of the boat. Check once again that trailer is mounted to trailer hitch.

The place where the boat will be taken on the trailer should be safe from the wind and waves and ramp should continue deep enough into water. Reverse trailer so deep that the rearmost keel support is just above the water level. Drive the boat carefully towards the rearmost keel support and fasten winch cable to trailer hook. Reel up the boat on trailer in a way that boat wont slide from side to side. Remember to trim up motor before reeling the boat on to trailer. Otherwise it can hit the bottom.

Yamarin 80 DC on trailer:

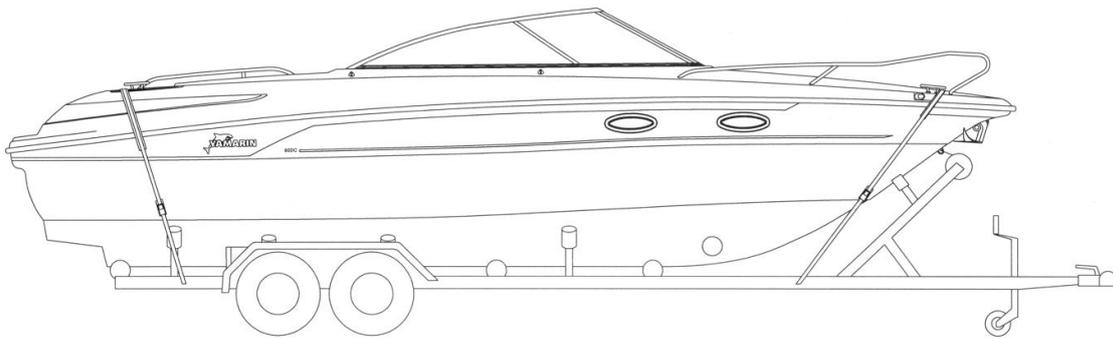

Tie the boat properly before starting the transport. Fastening belts located at the bow should be directed "down-back" and fastening belts located at rear should be directed "down-front". Do not leave any loose equipment or extra load to boat when it's transported. Take seat cushion away and close the hatches properly.

When transporting the boat the motor should be on its driving position. Make sure that there is the needed road clearance.

The fastening belts must be loosened up if the boat is kept on trailer between transportations and tightened up before next transportation.

NOTE!


The trailer should be a little front-weighted. Make sure that the boat is fasten tight enough to trailer and the weight of the boat is divided equally on the both side supports. If the boat swings against the side support, it can damage the hull.

When letting down the boat from trailer, remember to fasten the bow rope to the boat in order to release cable from the trailer hook when boat is on the water. Look out the winch handle!

5.10.9 Docking

The storage cradle should be sufficiently steady and suitable for the boat's dimensions. A sturdy plank (2x4") should be placed between the V trestles to support the keel and to bear most of the weight of the boat. The side supports must not support the boat. The side supports should have cut outs at the bottom steps to avoid load points on the steps. The supporting structures at the transom should be strong enough to also support the weight of the engine. Storage cradle dimensions are shown picture below.

Storage cradle dimensions:

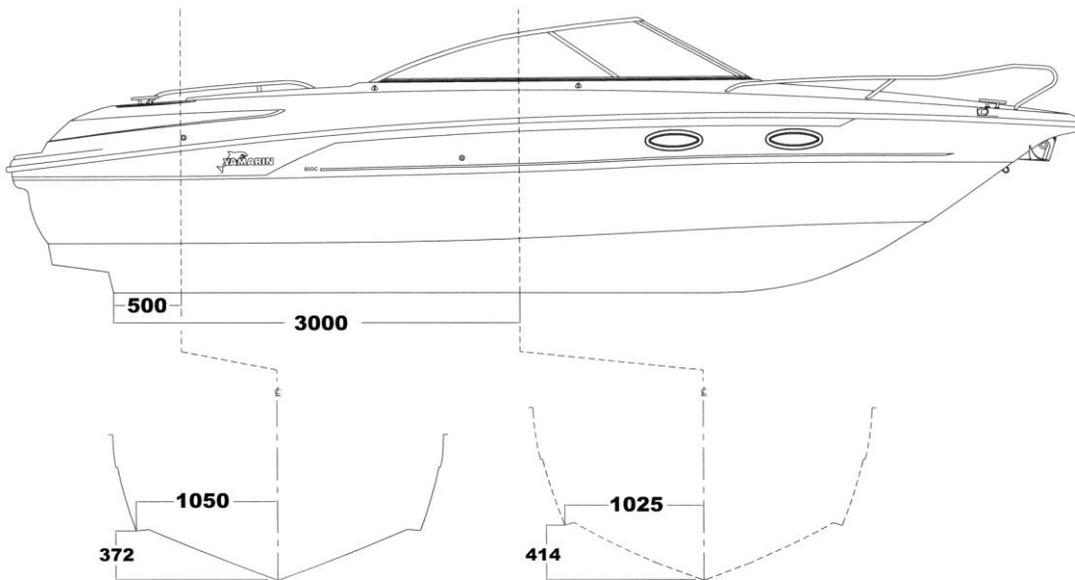

Only use reputable lifting companies or boat yards with sufficient lifting capacity. In addition to the boat's own weight (please refer to technical specification), also take into consideration the accessories and other possible loads on the boat.

When the boat is lifted, lines should be placed under the boat and, during lifting, the boat must remain horizontal.

NOTE! The boat cannot be lifted by the anchor bollards/strong points.

DANGER! Never stand under a boat that is suspended from a crane.

6 Servicing and maintenance

Maintain your boat and its components clean. It will make your boat more comfortable to use and increases the real sale value of the boat.

Familiarise yourself with the service procedures shown in the engine manual (see attachment). Carry out the service carefully, or ensure it is performed by an accredited service company

6.1 Washing and cleaning the boat

Normally it is sufficient just to wash and wax the deck and sides. A special boat cleaning agent is most suitable for the purpose. Mildly abrasive polishes can be used to remove chafing and embedded dirt. Fibreglass surfaces can be washed with a pressure washer.

Useful tips: When the boat has been washed using tap water, a thin chalk-like layer of lime and minerals will remain on the boat's surface after it has dried. The problem can be eliminated by adding a few drops of pine oil soap into a bucket of rinsing water, which will soften it.

Useful tips: Water and lime stains on stainless steel rails and handles disappear when you apply some Lemon Pled furniture spray. The rails start shining just as nice as they did when the boat left the shipyard.

Useful tips: If the boat's ropes smell bad after winter storage, immerse them for a couple of hours into a bucket of water and add a bottle of apple vinegar and a splash of fabric conditioner for clothes. Allow the lines to dry properly.

6.2 Care instructions for seat cushions

In order to ensure that the boat's seat cushions remain in good condition you are advised to always use the canopy or harbour cover when raining. Although they are made of water resistant material, their seams can let water in. It is advisable to protect the cushions by spraying them with Sunbrella -spray. If the cushions remain damp for any length of time, they may grow mouldy and become damaged. If the mattresses get wet, the fabric can be removed by unzipping the mattress and it can dried, for instance, in the sun, at room temperature or in a sauna (50°C). The warranty does not cover cushions spoiled by rain or dampness.

NOTE! During winter storage they must be stored in a dry and well-ventilated place.

NOTE! The wet cushions should not be placed in a storage room because they gather mould easily.

The press studs of the seat cushions should be sprayed with a silicon spray every now and then, otherwise they may become so tight that the fabric is torn when trying to open them. The warranty does not cover ripped seat cushions.

6.3 Care instructions for the synthetic teak

The synthetic teak cover should be washed with a scrub brush and detergent (for instance, car shampoo). The synthetic teak cover can also be washed with a pressure washer. If necessary, the surface can also be sanded with abrasive paper (roughness of even 80).

NOTE! No oil or wax should be applied to the synthetic teak.

6.4 Care instructions for the canopy

Store the canopy over winter in a dry and well-ventilated place. The press studs of the canopy should be sprayed with a silicon spray every now and then, otherwise they may become so tight that the fabric is torn when trying to open them. The warranty does not cover a canopy that has been damaged.

6.5 Care instructions for the windshield

The boat's windshield is made of tempered glass and it can be washed with ordinary glass cleaners.

Useful tips: When wiping the boat's windshield dry after cleaning avoid using circular motions. This can leave circular smudges on the windshield that become visible in sunlight impeding visibility. Wipe off any streaks with dry newspaper or cotton cloth first using horizontal motions and then vertical motions. Repeat this a few times and you'll bring the windshield to a brilliant shine.

6.6 Care instructions for the stainless steel components

To keep the boat's stainless steel parts, such as rails, handles and bollards, shining and as good as new, the owner of the boat should keep the parts clean and waxed. The edges of the mounting flanges of the rails should also be cleaned. Any dirt that remains under the edge of the flange will begin to look like rust. In the case of regular use (i.e. no damage), the parts should be cleaned and waxed at least twice every summer. In autumn, when the boat is stored for the winter, the rails should also be cleaned and waxed.

6.7 Care instructions for the electric remote control

If any problems occur with the operation of the remote control device, you should have an authorized Yamaha repair shop repair it.

6.8 Care instructions for the steering system

Normally the hydraulic steering system does not need to be serviced. If the steering becomes "loose", there is a leak in the system. The leak must be repaired immediately!

WARNING! A hydraulic system with leak, or one with trapped air is extremely dangerous.

6.9 Care instructions for electrical components

Electrical components, like main switches, other switches and couplings does not normally need to be serviced if the boat is winter stored in dry and well ventilated place. The best way to protect electrical components against oxidation is to spraying them every now and then with a moisture repellent antioxidant.

6.10 Minor superficial repairs

Minor damages to the boat's gel coat surface can be repaired by yourself. However, a neat, unnoticeable repair requires a considerable amount of skill:

1. Tape off the area around the damage. This is to ensure that the area around the damage isn't accidentally damaged.
2. Bevel the edges sloping into the damaged area and clean with acetone.
3. In the event that the damage is deeper than 2 mm it can be advisable to fill it with an appropriate polyfiller.
4. Mix topcoat with 1.5-2% hardener.
5. Fill the repair with more topcoat than needed, so that its surface remains slightly proud of the surrounding area.
6. Carefully put a tape over the topcoat (masking tape or brown parcel tape).
7. After the topcoat has hardened, remove the tape and sand it using 600- and 1200-paper applying water.
8. Buff using abrasive paste.

The colours used on this boat are specified in the section on Technical Specifications. One point to consider is that a paint called gelcoat has been used in manufacturing the boat but the surface is always repaired with a paint called topcoat. Gelcoat paint does not harden without a mould surface whereas paraffin has been added to topcoat to allow it to harden.

NOTE! Certain post delivery installations may cause damage to the structure of the boat or impair safety if not performed correctly. Please contact the dealer before any questionable works are carried out on the boat.

7 Winter storage

Preparing boats for winter storage is an annual autumnal routine. Have your boat lifted in good time before the water freezes. Your boat is not designed for use in ice and it is not meant to be used in below zero temperatures (for example, the rain water draining system will freeze). It is advisable to perform all maintenance repair and inspection procedures when lifting the craft.

Please familiarise yourself with the servicing instructions provided in the engine manual. We recommend that you leave them to an authorised service agent. Do not forget to service the remote control and steering system. Make sure to perform their maintenance according to separate instructions and manuals.

7.1 Measures before winter storage

Wash the bottom of the boat immediately after the boat has been lifted. Algae and slime will come off easier if they are not left to dry. Give the engine, and other accessories – following separate manuals, their winter service. If your boat is stored outside or in a humid place during the winter, remove the textiles and other equipment that may corrode or become mouldy in damp conditions. Wash the ropes in fresh water. Replace ropes that are worn. Leave bushing valves open. Remove drain plug for the winter.

Check the condition of the hull and rub down any scrapes to let possible moisture inside the laminate dry. Repair damages in spring before launching the boat.

Always cover your boat so that snow cannot gather inside. Always make sure, however, that there is adequate ventilation. As an optional extra there is a winter storage protector for your boat.

7.2 Measures before launching

Repair possible damages to the gel coat surface according to section 6.8.

In coastal areas an antifouling paint should be used to prevent the hull from becoming covered. Fouling of the bottom and especially the propeller increases the fuel consumption remarkably. However, if the boat is anchored at the inlet of a stream, on a land locked lake, or if it is lifted out of the water at least once a week, it is normally not necessary to use an antifouling paint. Carefully follow the paint manufacturer's instructions when applying the antifouling paint. If you are sanding old antifouling paint, remember that the dust is toxic.

At lake areas antifouling is not needed and not recommended. However, we recommend using epoxy primer if the boat is left in the water for several months each year. Fresh water, especially warm fresh water is absorbed easier to laminate than seawater.

NOTE!

Do not apply any paint to the zinc anodes, log sensor, or piston rods of hydraulic trim tabs. Do not apply paints containing copper on aluminium parts and remember to follow the paint manufacturer's instructions.

Useful tips: Do not throw away a used paint brush. A dried and hardened paint brush that has been used for antifouling paint can be reused if you first soak it for a couple of hours in a mix of 2 litres of hot water, 100 ml of vinegar, and 50 ml of baking powder.


Perform the necessary service procedures according to the engine manual. Check the function of electric equipment and remove possible oxidation from fuse connectors etc.

Remember that eventually, petrol turns stale in time, and that you should always use fresh fuel when starting the engine for the first time after winter storage.

When the boat has been launched you should open all hull bushings and check to ensure that there are no leaking hoses or connectors. Bring the safety equipment on-board before setting off.


8 Lay-out

8.1 General lay-out

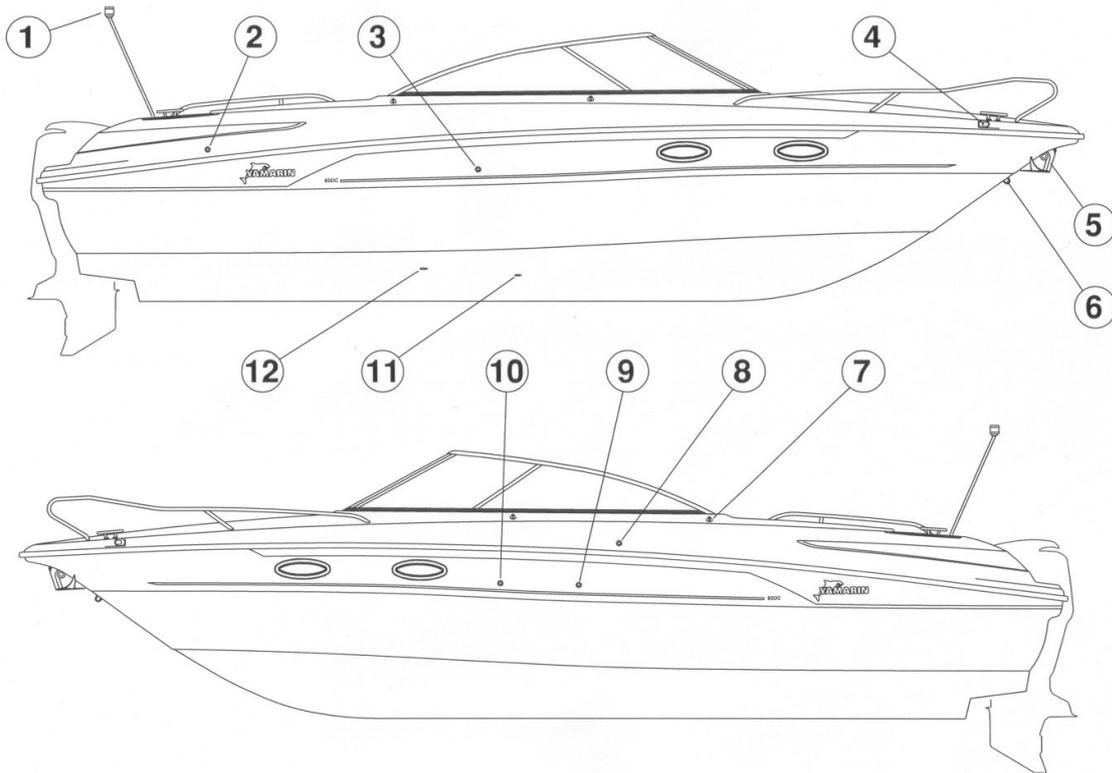

1. Light mast
2. Fuel tank vent
3. Waste tank vent
4. Navigation light
5. Place for bow anchor
6. Trailer hook
7. Fender fastener

8. Fresh water tank vent
9. Stove exhaust feed-through
10. Wash basin emptying feed-through
11. Thru fitting for water intake
12. Waste tank sea drainage

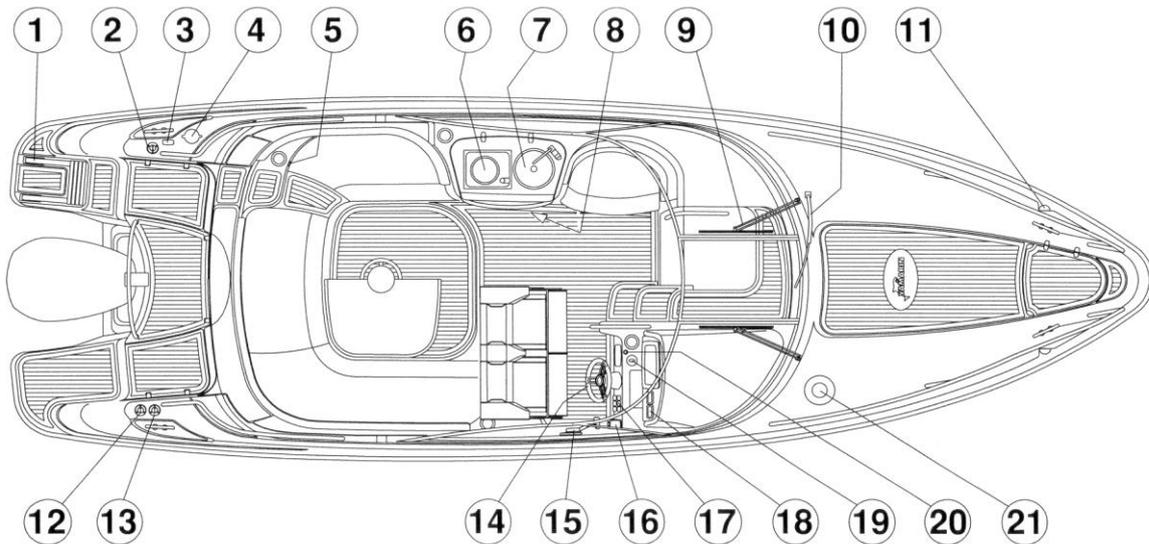


- | | |
|-----------------------------|-----------------------------------|
| 1. Telescoping ladder | 12. Fuel refill |
| 2. Fresh water refill | 13. Waste tank vacuum emptying |
| 3. Light mast foot | 14. Wheel |
| 4. Swimming platform shower | 15. Electric remote control |
| 5. Mug holder | 16. Trim switches |
| 6. Stove | 17. Switch panel |
| 7. Sink | 18. LAN 2-gauge |
| 8. Refrigerator | 19. Bow propeller control unit |
| 9. Windshield wiper | 20. Hydraulic steering oil refill |
| 10. Windshield door pump | 21. Solar cell fan |
| 11. Navigation light | |

WARNING!


Treat the boat's hatches with care and watch your fingers and toes. **Be especially careful with the forward anchor box hatch which is equipped with an elastic strap.**

Yamarin 80 DC cabin lay-out:

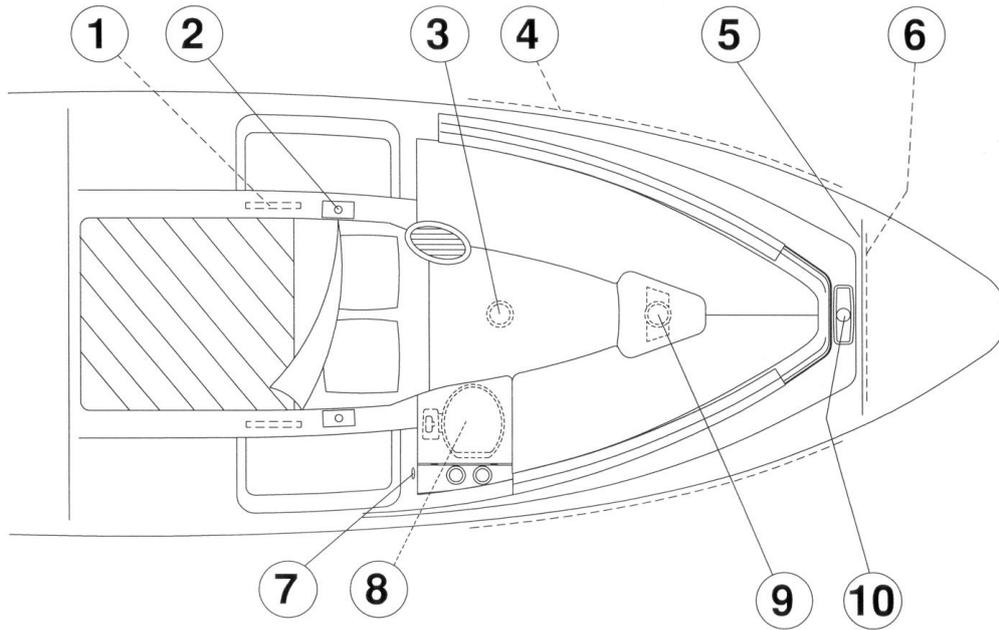

- | | |
|--------------------|-----------------------------|
| 1. Cabin LED-light | 6. Mirror light |
| 2. Deck support | 7. 12 V -power outlet |
| 3. Ceiling light | 8. Toilet |
| 4. Side lights | 9. Bow propeller |
| 5. Mirror | 10. Storage box/bottle cage |

Yamarin 80 DC fresh water system + stove:

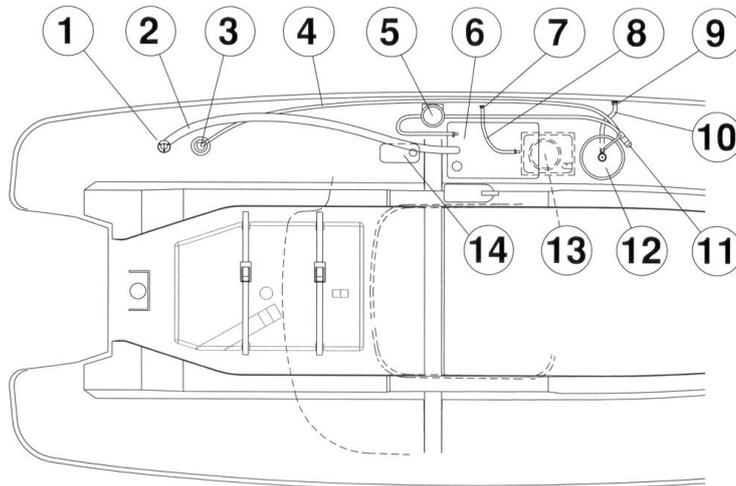

- | | |
|-----------------------------------|-------------------------------------|
| 1. Fresh water refill | 8. Stove exhaust hose |
| 2. Fresh water tank filling hose | 9. Wash basin emptying feed-through |
| 3. Swimming platform shower | 10. Wash basin emptying hose |
| 4. Water hose from pump to shower | 11. Tap |
| 5. Fresh water pump | 12. Sink |
| 6. Fresh water tank | 13. Stove |
| 7. Stove exhaust feed-through | 14. Fuel tank for stove |


8.2 Fuel system

Yamarin 80 DC is equipped with a built-in-fuel tank. There is a fuel filter, which also serves as a transparent water separator. The filter must be changed at least once a year. When a new or removed filter has been mounted, the fuel line must be filled with a ball pump before starting the engine.

NOTE !

The condition of the fuel hoses has to be inspected at regular intervals and every effort should be made to prevent damage to them. Damaged fuel hoses should be changed. If you change fuel hoses, make sure they have an ISO 7840 label.

Yamarin 80 DC fuel system:

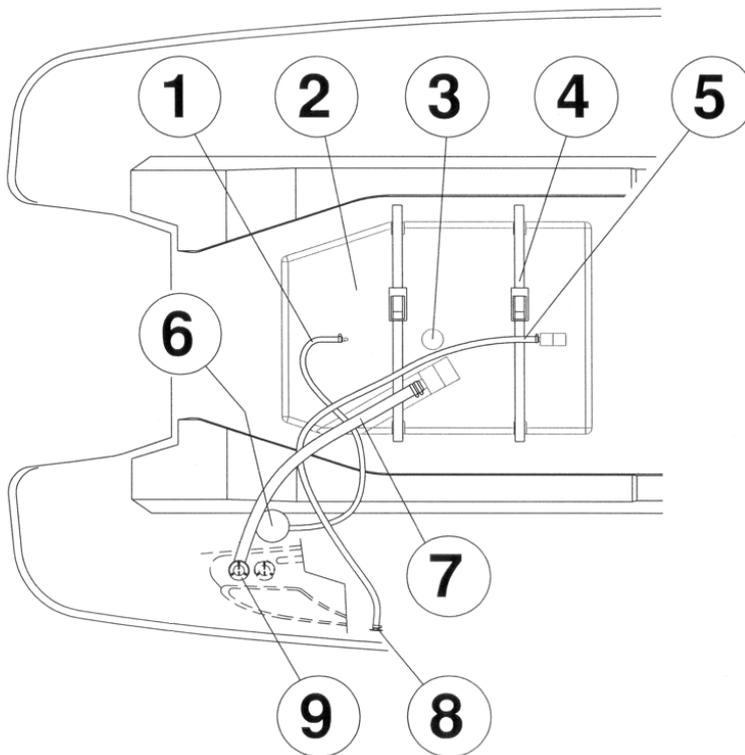

- | | |
|----------------------------|---------------------------|
| 1. Fuel feeding hose | 6. Fuel filter |
| 2. Fuel tank | 7. Fuel tank filling hose |
| 3. Fuel tank sensor | 8. Fuel tank vent |
| 4. Fastening strap | 9. Fuel filling |
| 5. Fuel tank breather hose | |

The fuel bushing of the fuel tank has been marked with a  symbol on the boat deck.

8.3 Steering system

Yamarin 80 DC is equipped with a hydraulic steering system as standard. One of the features of the hydraulic steering system is that the position of the steering wheel changes continuously. For this reason, the boat has a symmetrical steering wheel. The lengths of hydraulic hoses are:

- 2 x 2,5 m
- 2 x 3,5 m


Hydraulic steering does not normally require maintenance. If the steering becomes "loose" the system has a leak. Any leaks must be repaired immediately!

NOTE!

If you want to replace a component in the steering system, please note that all components must be in conformity with the ISO 10592 standard and carry the CE mark.

WARNING!

Hydraulic steering system, which has a leak or air, is highly dangerous.

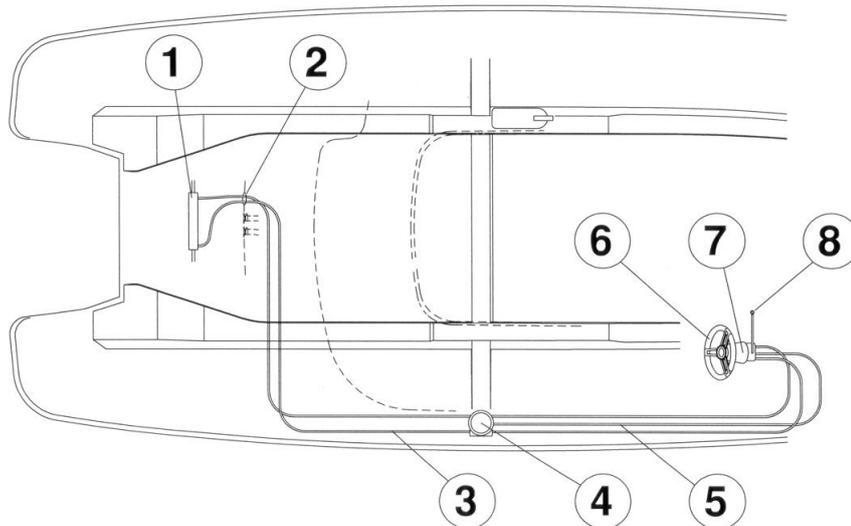

1. Hydraulic steering cylinder
2. Hydraulic hose feed-through
3. Hydraulic hose
4. Power steering

5. Oil overflow pipe
6. Wheel
7. Tilt- steering pump
8. Hydraulic steering oil refill

8.4 Electrical system

The electrical system installed in the Yamarin 80 Day Cruiser includes the following main components:

1. STARTER BATTERY
2. WIRE HARNESS
3. 2 PCS MAIN SWITCHES
4. BATTERY COMPARTMENT FUSEPANEL
5. 3 PCS SWITCHES WITH AUTOMATIC FUSES
6. 3 PLACES FOR EXTRA SWITCHES
7. 2 PCS 12-V POWER OUTLET
8. NAVIGATION LIGHTS
9. WINDSHIELD WIPER (RIGHT AND LEFT)
10. FRESH WATER PUMP
11. CABIN LIGHTS
12. REFRIGERATOR
13. TRIMS


In addition, the engine is an essential part of the boat's electrical system, which functions both as a power source and a power consumer.

If you connect or disconnect batteries, take care not to touch both battery terminals with a metal object at the same time.

Charge the batteries only with the onboard battery charger or one with similar wattage. Charging at excessive power causes an explosion risk.

Do not alter the onboard electric system or relevant drawings; changes and maintenance work have to be carried out by a professional.

Yamarin 80 DC electrical system

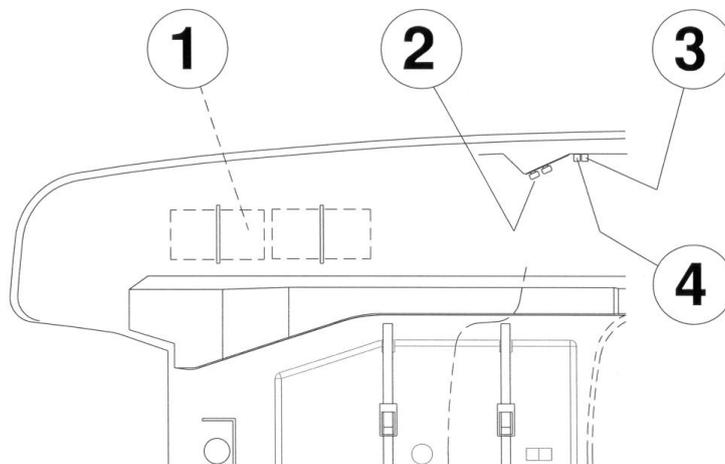


1. Battery
2. Main switch

3. Fuse for bow propeller
4. Fuse for aft anchor winch

8.5 Wiring diagram

8.5.1 Switch / fuse panel

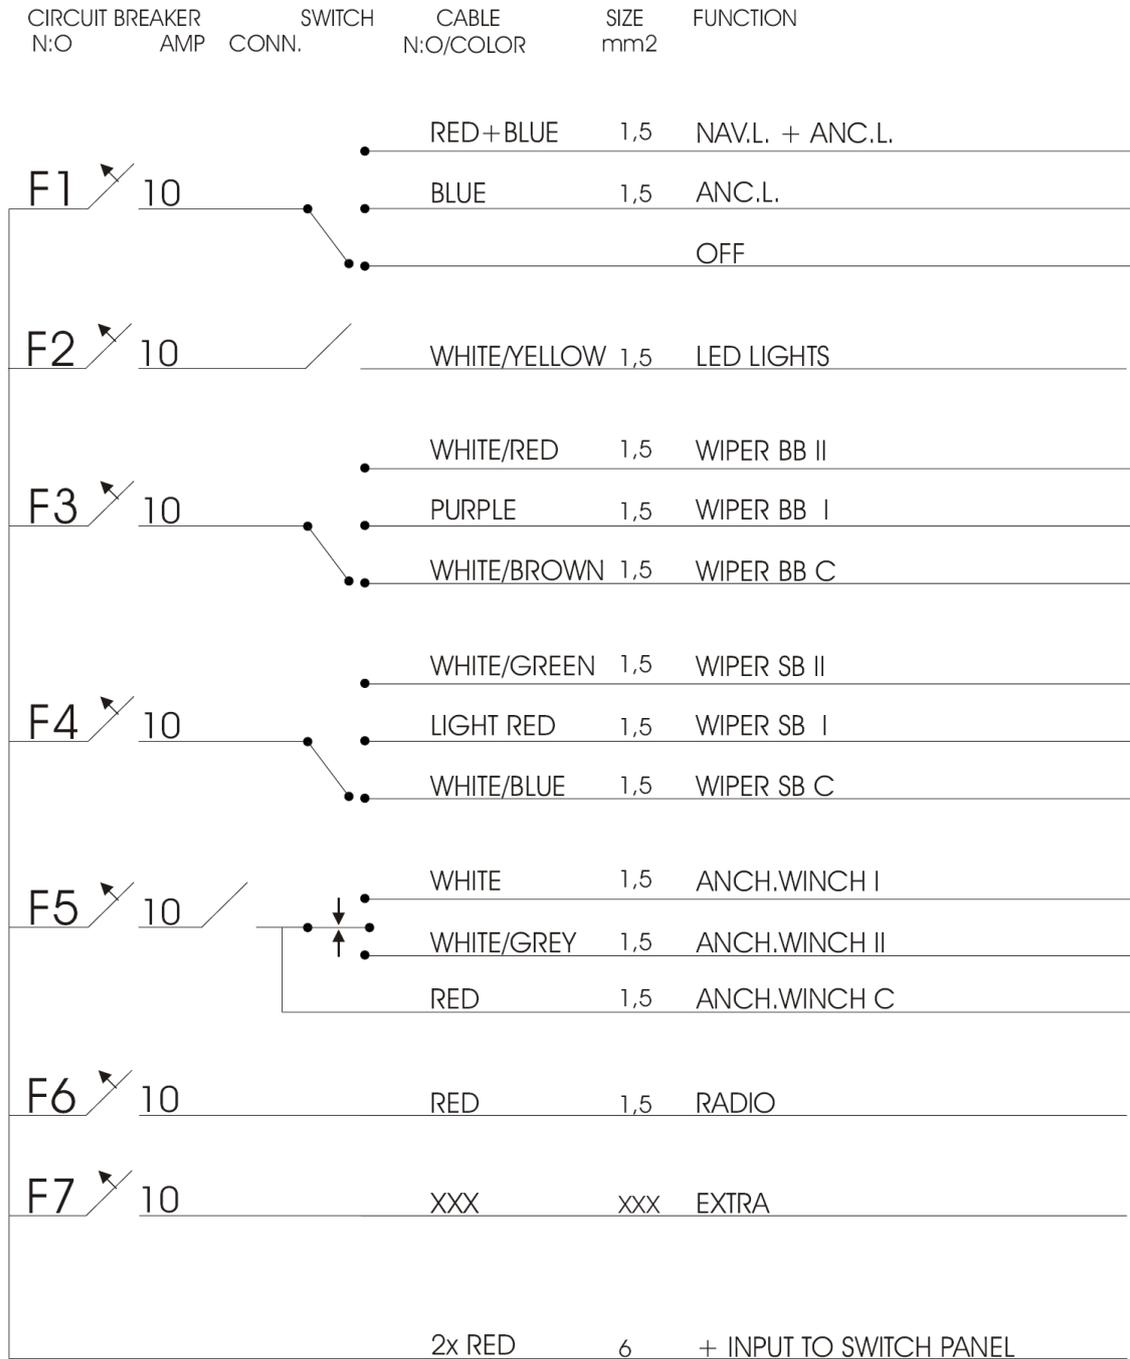

MODIFICATION DESCRIPTION:	Revision	B1	Date	YAMARIN 80 DC DIAGRAM SWITCH/FUSE PANEL N:O 7496DRA
	Drawn by	MH	14.11.-08	
	Modified by	xx	xx.xx.-xx	
	PAGE: 1/3			

8.5.2 Main switch

CIRCUIT BREAKER N:O	AMP	SWITCH CONN.	CABLE N:O/COLOR	SIZE mm2	FUNCTION
F1	25		RED	6	MAIN I (+ INPUT TO SWITCH PANEL)
F2	25		RED	6	MAIN II (+ INPUT TO SWITCH PANEL)
F3	10		YELLOW/BLACK	1,5	CAB.L. (+ INPUT TO CAB. L. PANEL)
F4	15		GREEN/BLACK	1,5	OUTLET
			RED/BLACK	1,5	PENTRY PUMP
F5	20		RED	6	TRIM
F6	10		RED	1,5	PLOTTER
F7	10				EXTRA
F13	20		RED	6	POWER STEERING
F14	20				
F8	15		BLUE	6	FRIDGE
F9	20		GREY	6	STOWE
F10	10		BLUE/RED	1,5	MEMORY
F11	10		RED	2,5	BILGE PUMP
F12	20		BLUE	6	HEATER
		DIR. SUPPLY SWITCH			
		BATTERY SWITCH SERVICE			
		SERVICE	RED	6	ISOLATOR (FROM ENGINE CHARGER)
			3x BLACK	6	- INPUT TO CONSUMERS
		START	RED	35	TO ENGINE
		BATTERY SWITCH START	BLACK	35	TO ENGINE

MODIFICATION DESCRIPTION:	Revision	B1	Date	YAMARIN 80 DC DIAGRAM MAIN SWITCH PANEL 	N:O
	Drawn by	MH	14.11.-08		
	Modified by	XX	xx.xx.-xx		
	PAGE: 2/3				

8.5.3 Cabin light switches

CIRCUIT BREAKER N:O	SWITCH AMP	CONN.	CABLE N:O/COLOR	SIZE mm2	FUNCTION
			GREY/BROWN	1,5	MAIN LIGHT
			GREY/RED	1,5	MIRROR LIGHT
			GREY/GREEN	1,5	SIDE LIGHT
			GREY	1,5	BED LIGHT
			YELLOW/BLACK 1,5 + INPUT TO CABIN LIGHT PANEL		

MODIFICATION DESCRIPTION:	Revision	B1	Date	YAMARIN 80 DC DIAGRAM CABIN LIGHT PANEL 
	Drawn by	MH	14.11.-08	
	Modified by	XX	xx.xx.-xx	
	PAGE: 3/3			

N:O
7496DRA